

I/O NUMBER	DESCRIPTION	TYPE	SOURCE/DESTINATION	COMMENTS
X 1100	PUMP #1 OVERLOAD	DI	OVERLOAD CONTACT	ALARM SIGNAL TO AUTODIALER
X 1100	PUMP #1 RUN STATUS	DI	MOTOR STARTER AUXILIARY	
Z 1101	PUMP #1 CHECK VALVE CLOSED	DI	PROXIMITY SWITCH	ALARM SIGNAL TO AUTODIALER
X 1200	PUMP #2 OVERLOAD STATUS	DI	OVERLOAD CONTACT	ALARM SIGNAL TO AUTODIALER
I 1200	PUMP #2 RUN STATUS	DI	MOTOR STARTER AUXILIARY	
Z 1201	PUMP #2 CHECK VALVE CLOSED	DI	PROXIMITY SWITCH	ALARM SIGNAL TO AUTODIALER
L 1300	WETWELL LOW LEVEL ALARM	DI	LOW LEVEL FLOAT SWITCH	ALARM SIGNAL TO AUTODIALER
L 1301	WETWELL HIGH LEVEL ALARM	DI	HIGH LEVEL FLOAT SWITCH	ALARM SIGNAL TO AUTODIALER
L 1302	WETWELL LEVEL	AI	LEVEL TRANSMITTER	
F 1400	PUMP STATION FLOW	AI	FLOW METER TRANSMITTER	
H 1100-1	PUMP #1 RUN COMMAND	DO	MOTOR STARTER	
H 1100-2	PUMP #1 IN AUTO	DO	H-O-A SELECTOR SWITCH	
H 1200-1	PUMP #1 RUN COMMAND	DO	MOTOR STARTER	
H 1200-2	PUMP #2 IN AUTO	DI	H-O-A SELECTOR SWITCH	
X 1500A	PRIMARY POWER LOSS	DI	AUTOMATIC TRANSFER SWITCH	ALARM SIGNAL TO AUTODIALER
X 1500B	AUXILIARY POWER LOSS	DI	AUTOMATIC TRANSFER SWITCH	ALARM SIGNAL TO AUTODIALER