



-
- FROM LINE 70
- CROSS CONNECT VALVE
- CR80
- CROSS CONNECT VALVE OPEN COMMAND
- CROSS CONNECT VALVE CLOSE COMMAND
- CLOSE
- OPEN
- CR80
- PR93
- REMOTE STATUS TO RTU 4A
- CROSS CONNECT VALVE OPENED
- CROSS CONNECT VALVE CLOSED
- CR85
- CR87
- CROSS CONNECT VALVE OPENED
- CROSS CONNECT VALVE CLOSED
- 120VAC
- PR 90A
- TRANSFER PUMP 1 STOP COMMAND FROM RTU 4A
- 120VAC
- PR 90B
- TRANSFER PUMP 2 STOP COMMAND FROM RTU 4A
- 120VAC
- PR 90C
- TRANSFER VALVE 1 RECIRC COMMAND FROM RTU 4A
- 120VAC
- PR 90D
- TRANSFER VALVE 2 RECIRC COMMAND FROM RTU 4A
- 120VAC
- PR 90E
- BULK TANK 1 MAX FILL LEVEL FROM RTU 4A
- 120VAC
- PR 90F
- BULK TANK 2 MAX FILL LEVEL FROM RTU 4A
- 120VAC
- PR 93
- CROSS CONNECT VALVE OPEN COMMAND FROM RTU 4A
- PR13
- TRANSFER PUMP 1 FAIL TO RTU 4A
- PR31
- TRANSFER PUMP 2 FAIL TO RTU 4A
- CR39
- HIGH TEMPERATURE TO RTU 4A
- CR52
- TRANSFER VALVE 1 RECIRCULATION TO RTU 4A
- CR64
- TRANSFER VALVE 1 TRANSFER TO RTU 4A
- CR61
- TRANSFER VALVE 2 RECIRCULATION TO RTU 4A
- CR63
- TRANSFER VALVE 2 TRANSFER TO RTU 4A
- CR65
- CROSS CONNECT VALVE OPENED TO RTU 4A
- CR87
- CROSS CONNECT VALVE CLOSED TO RTU 4A

THE SCALE BAR SHOWN BELOW MEASURES ONE INCH LONG ON THE ORIGINAL DRAWING.	DATE OCTOBER 2014	
	H&S JOB NUMBER 31197-00	
	CONTRACT NUMBER 1	DRAWING NUMBER E202