STD & SPEC 3.02

TEMPORARY STONE CONSTRUCTION ENTRANCE (CE)

Definition

A stabilized stone pad with a filter fabric underliner located at points of vehicular ingress and egress on a construction site.

Purpose

To reduce the amount of mud transported onto paved public roads by motor vehicles or runoff.

Conditions Where Practice Applies

Wherever traffic will be leaving a construction site and move directly onto a public road or other paved area.

Planning Considerations

Minimum Standard #17 (MS #17) requires that provisions be made to minimize the transport of sediment by vehicular traffic onto a paved surface. Construction entrances provide an area where a significant amount of mud can be removed from construction vehicle tires before they enter a public road and, just as important, the soil adjacent to the paved surface can be kept intact. A filter fabric liner is used as a "separator" to minimize the dissipation of aggregate into the underlying soil due to construction traffic loads. If the action of the vehicles traveling over the gravel pad is not sufficient to remove the majority of the mud or there exists an especially sensitive traffic situation on the adjacent paved road, the tires must be washed before the vehicle enters the public road. If washing is necessary, provisions must be made to intercept the wash water and trap the sediment so it can be collected and stabilized. Construction entrances should be used in conjunction with the stabilization of construction roads (see Std. & Spec. 3.03, CONSTRUCTION ROAD STABILIZATION) to reduce the amount of mud picked up by construction vehicles and to do a better job of mud removal. Other innovative techniques for accomplishing the same purpose (such as a bituminous entrance) can be utilized, but only after specific plans and details are submitted to and approved by the appropriate Plan-Approving Authority.

Design Criteria

Aggregate Size

VDOT #1 Coarse Aggregate (2- to 3-inch stone) should be used.

Entrance Dimensions

The aggregate layer must be at least 6 inches thick; a minimum three inches of aggregate should be placed in a cut section to give the entrance added stability and to help secure filter cloth separator. It must extend the full width of the vehicular ingress and egress area and have a minimum 12-foot width. The length of the entrance must be at least 30 feet (see Plate 3.02-1).

Washing

If conditions on the site are such that the majority of the mud is not removed by the vehicles traveling over the stone, then the tires of the vehicles must be washed before entering the public road. Wash water must be carried away from the entrance to a approved settling area to remove sediment. All sediment shall be prevented from entering storm drains, ditches, or watercourses. A wash rack may also be used to make washing more convenient and effective (see Plate 3.02-1).

Location

The entrance should be located to provide for maximum utilization by all construction vehicles.

Construction Specifications

The area of the entrance must be excavated a minimum of 3 inches and must be cleared of all vegetation, roots, and other objectionable material. The filter fabric underliner will then be placed the full width and length of the entrance.

Following the installation of the filter cloth, the stone shall be placed to the specified dimensions. If wash racks are used, they should be installed according to manufacturer's specifications. Any drainage facilities required because of washing should be constructed according to specifications. Conveyance of surface water under entrance, through culverts, shall be provided as required. If such conveyance is impossible, the construction of a "mountable" berm with 5:1 slopes will be permitted.

The filter cloth utilized shall be a woven or nonwoven fabric consisting only of continuous chain polymeric filaments or yarns of polyester. The fabric shall be inert to commonly encountered chemicals and hydrocarbons, be mildew and rot resistant, and conform to the physical properties noted in Table 3.02-A.

Maintenance

The entrance shall be maintained in a condition which will prevent tracking or flow of mud onto public rights-of-way. This may require periodic top dressing with additional stone or the washing and reworking of existing stone as conditions demand and repair and/or cleanout of any structures used to trap sediment. All materials spilled, dropped, washed, or tracked from vehicles onto roadways or into storm drains must be removed immediately. The use of water trucks to remove materials dropped, washed, or tracked onto roadways will not be permitted under any circumstances.

STONE CONSTRUCTION ENTRANCE

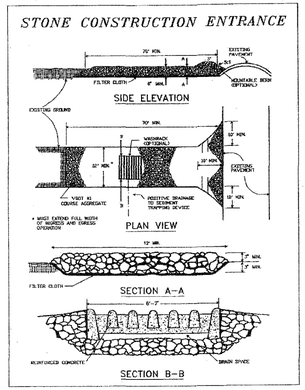

Source: Adapted from 1983 Maryland Standards for Soil Erosion and Sediment Control, and Va. DSWC

Plate 3.02-1

STD & SPEC 3.05

SILT FENCE (SF)

Definition

A temporary sediment barrier consisting of a synthetic filter fabric stretched across and attached to supporting posts and entrenched.

Purposes

1. To intercept and detain small amounts of sediment from disturbed areas during construction operations in order to prevent sediment from leaving the site.
2. To decrease the velocity of sheet flows and low-to-moderate level channel flows.

Conditions Where Practice Applies

1. Below disturbed areas where erosion would occur in the form of sheet and rill erosion.
2. Where the size of the drainage area is no more than one quarter acre per 100 feet of silt fence length; the maximum slope length behind the barrier is 100 feet; and the maximum gradient behind the barrier is 50 percent (2:1).
3. In minor swales or ditch lines where the maximum contributing drainage area is no greater than 1 acre and flow is no greater than 1 cfs.
4. Silt fence will not be used in areas where rock or some other hard surface prevents the full and uniform depth anchoring of the barrier.

Planning Considerations

Laboratory work at the Virginia Highway and Transportation Research Council (VHTRC) has shown that silt fences can trap a much higher percentage of suspended sediments than straw bales, though silt fence passes the sediment-laden water slower. Silt fences are preferable to straw barriers in many cases because of their durability and potential cost savings. While the failure rate of silt fences is lower than that of straw barriers, many instances have been observed where silt fences are improperly installed, inviting failure and sediment loss. The installation methods outlined here can improve performance and reduce failures.

As noted, flow rate through silt fence is significantly lower than the flow rate for straw bale barriers. This creates more ponding and hence more time for sediment to fall out. Table 3.05-A demonstrates these relationships.

Both woven and non-woven synthetic fabrics are commercially available. The woven fabrics generally display higher strength than the non-woven fabrics and, in most cases, do not require any additional reinforcement. When tested under acid and alkaline water conditions, most of the woven fabrics increase in strength, while the reactions of non-woven fabrics to these conditions are variable. The same is true of testing under extensive ultraviolet radiation. Permeability rates vary regardless of fabric type. While all of the fabrics demonstrate very high filtering efficiencies for sandy sediments, there is considerable variation among both woven and non-woven fabrics when filtering the finer silt and clay particles.

Design Criteria

1. No formal design is required. As with straw bale barriers, an effort should be made to locate silt fence at least 5 feet to 7 feet beyond the base of disturbed slopes with grades greater than 7%.

TABLE 3.05-A

TYPICAL FLOW RATES AND FILTERING EFFICIENCIES OF PERIMETER CONTROL

Material	Flow Rate (gal./sq.ft./min)	Filter Efficiency(%)
Straw	5.6	67
Synthetic Fabric	0.3	97

Source: VHTRC

2. The use of silt fences, because they have such a low permeability, is limited to situations in which only sheet or overland flows are expected and where concentrated flows originate from drainage areas of 1 acre or less.
3. Field experience has demonstrated that, in many instances, silt fence is installed too short (less than 16 inches above ground elevation). The short fence is subject to breaching during even small storm events and will require maintenance "clean outs" more often. Properly supported silt fence which stands 24 to 34 inches above the existing grade tends to promote more effective sediment control.

Construction Specifications

Materials

1. Synthetic filter fabric shall be a pervious sheet of propylene, nylon, polyester or ethylene yarn and shall be certified by the manufacturer or supplier as conforming to the requirements noted in Table 3.05-B.
2. Synthetic filter fabric shall contain ultraviolet ray inhibitors and stabilizers to provide a minimum of six months of expected usable construction life at a temperature range of 0° F to 120° F.
3. If wooden stakes are utilized for silt fence construction, they must have a diameter of 2 inches when oak is used and 4 inches when pine is used. Wooden stakes must have a minimum length of 5 feet.

TABLE 3.05-B

PHYSICAL PROPERTIES OF FILTER FABRIC IN SILT FENCE

Physical Property	Test	Requirements
Filtering Efficiency	ASTM 5141	75% (minimum)
Tensile Strength at 20% (max.) Elongation*	VTM-52	Extra Strength - 50 lbs./linear inch (minimum) Standard Strength - 30 lbs./linear inch (minimum)
Flow Rate	ASTM 5141	0.2 gal./sq.ft./ minute (minimum)
Ultraviolet Radiation Stability %	ASTM-G-26	90% (minimum)

* Requirements reduced by 50% after six months of installation.

Source: VHTRC

4. If steel posts (standard "U" or "I" section) are utilized for silt fence construction, they must have a minimum weight of 1.33 pounds per linear foot and shall have a minimum length of 5 feet.
5. Wire fence reinforcement for silt fences using standard-strength filter cloth shall be a minimum of 14 gauge and shall have a maximum mesh spacing of 6 inches.

Installation

1. The height of a silt fence shall be a minimum of 16 inches above the original ground surface and shall not exceed 34 inches above ground elevation.

2. The filter fabric shall be purchased in a continuous roll cut to the length of the barrier to avoid the use of joints. When joints are unavoidable, filter cloth shall be spliced together only at a support post, with a minimum 6-inch overlap, and securely sealed.
3. A trench shall be excavated approximately 4-inches wide and 4-inches deep on the upslope side of the proposed location of the measure.
4. When wire support is used, standard-strength filter cloth may be used. Posts for this type of installation shall be placed a maximum of 10-feet apart (see Plate 3.05-1). The wire mesh fence must be fastened securely to the upslope side of the posts using heavy duty wire staples at least one inch long, tie wires or hog rings. The wire shall extend into the trench a minimum of two inches and shall not extend more than 34 inches above the original ground surface. The standard-strength fabric shall be stapled or wired to the wire fence, and 8 inches of the fabric shall be extended into the trench. The fabric shall not be stapled to existing trees.
5. When wire support is not used, extra-strength filter cloth shall be used. Posts for this type of fabric shall be placed a maximum of 6-feet apart (see Plate 3.05-2). The filter fabric shall be fastened securely to the upslope side of the posts using one inch long (minimum) heavy-duty wire staples or tie wires and eight inches of the fabric shall be extended into the trench. The fabric shall not be stapled to existing trees. This method of installation has been found to be more commonplace than #4.
6. If a silt fence is to be constructed across a ditch line or swale, the measure must be of sufficient length to eliminate endflow, and the plan configuration shall resemble an arc or horseshoe with the ends oriented upslope (see Plate 3.05-2). Extra-strength filter fabric shall be used for this application with a maximum 3-foot spacing of posts.

   All other installation requirements noted in #5 apply.
7. The 4-inch by 4-inch trench shall be backfilled and the soil compacted over the filter fabric.
8. Silt fences shall be removed when they have served their useful purpose, but not before the upslope area has been permanently stabilized.

CONSTRUCTION OF A SILT FENCE (WITH WIRE SUPPORT)

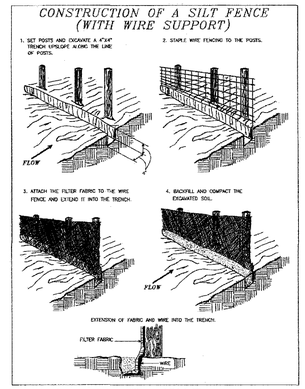

Source: Adapted from Installation of Straw and Fabric Filter Barriers for Sediment Control, Sherwood and Wyant

Plate 3.05-1

CONSTRUCTION OF A SILT FENCE (WITHOUT WIRE SUPPORT)

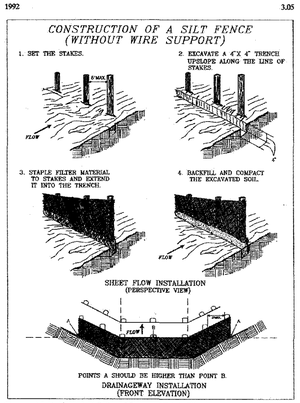

Source: Adapted from Installation of Straw and Fabric Filter Barriers for Sediment Control, Sherwood and Wyant

Plate 3.05-2

Maintenance

1. Silt fences shall be inspected immediately after each rainfall and at least daily during prolonged rainfall. Any required repairs shall be made immediately.
2. Close attention shall be paid to the repair of damaged silt fence resulting from end runs and undercutting.
3. Should the fabric on a silt fence decompose or become ineffective prior to the end of the expected usable life and the barrier still be necessary, the fabric shall be replaced promptly.
4. Sediment deposits should be removed after each storm event. They must be removed when deposits reach approximately one-half the height of the barrier.
5. Any sediment deposits remaining in place after the silt fence is no longer required shall be dressed to conform with the existing grade, prepared and seeded.

STD & SPEC 3.07

STORM DRAIN INLET PROTECTION (IP)

Definition

A sediment filter or an excavated impounding area around a storm drain drop inlet or curb inlet.

Purpose

To prevent sediment from entering storm drainage systems prior to permanent stabilization of the disturbed area.

Conditions Where Practice Applies

Where storm drain inlets are to be made operational before permanent stabilization of the corresponding disturbed drainage area. Different types of structures are applicable to different conditions (see Plates 3.07-1 through 3.07-8).

Planning Considerations

Storm sewers which are made operational prior to stabilization of the associated drainage areas can convey large amounts of sediment to natural drainageways. In case of extreme sediment loading, the storm sewer itself may clog and lose a major portion of its capacity. To avoid these problems, it is necessary to prevent sediment from entering the system at the inlets.

This practice contains several types of inlet filters and traps which have different applications dependent upon site conditions and type of inlet. Other innovative techniques for accomplishing the same purpose are encouraged, but only after specific plans and details are submitted to and approved by the appropriate Plan-Approving Authority.

Care should be taken when choosing a specific type of inlet protection. Field experience has shown that inlet protection which causes excessive ponding in an area of high construction activity may become so inconvenient that it is removed or bypassed, thus transmitting sediment-laden flows unchecked. In such situations, a structure with an adequate overflow mechanism should be utilized.

The following inlet protection devices are for drainage areas of one acre or less. Runoff from larger disturbed areas should be routed to a TEMPORARY SEDIMENT TRAP (Std. & Spec. 3.13) or a TEMPORARY SEDIMENT BASIN (Std. & Spec. 3.14).

The best way to prevent sediment from entering the storm sewer system is to stabilize the site as quickly as possible, preventing erosion and stopping sediment at its source.

Stone is utilized as the chief ponding/filtering agent in most of the inlet protection types described in this specification. The various types of "coarse aggregates" which are depicted are able to filter out sediment mainly through slowing down flows directed to the inlet by creating an increased flow path for the stormwater (through void space in the respective stone). The stone filtering medium by no means slows stormwater flowrate as does filter cloth and therefore cannot provide the same degree of filter efficiency when smaller silt and clay particles are introduced into stormwater flows. However, as mentioned earlier, excessive ponding in busy areas adjacent to stormwater inlets is in many cases unacceptable - that is why stone must be utilized with many installations.

Fortunately, in most instances, inlet protection utilizing stone should not be the sole control measure. At the time that storm sewer inlet and associated appurtenances become operational, areas adjacent to the structures are most likely at final grade or will not be altered for extended periods; this is the time when TEMPORARY SEEDING (Std. & Spec. 3.31) and other appropriate controls should be implemented to enhance sediment-loss mitigation. In addition, by varying stone sizes used in the construction of inlet protection, a greater degree of sediment removal can be obtained. As an option, filter cloth can be used with the stone in these devices to further enhance sediment removal. Notably, the potential inconvenience of excessive ponding must be examined with these choices, especially the latter.

Design Criteria

1. The drainage area shall be no greater than 1 acre.
2. The inlet protection device shall be constructed in a manner that will facilitate clean-out and disposal of trapped sediment and minimize interference with construction activities.
3. The inlet protection devices shall be constructed in such a manner that any resultant ponding of stormwater will not cause excessive inconvenience or damage to adjacent areas or structures.
4. Design criteria more specific to each particular inlet protection device will be found on Plates 3.07-1 through 3.07-8.
5. For the inlet protection devices which utilize stone as the chief ponding/filtering medium, a range of stone sizes is offered: VDOT #3, #357, or #5 Coarse Aggregate should be used. The designer/plan reviewer should attempt to get the greatest amount of filtering action possible (by using smaller-sized stone), while not creating significant ponding problems.
6. In all designs which utilize stone with a wire-mesh support as a filtering mechanism, the stone can be completely wrapped with the wire mesh to improve stability and provide easier cleaning.
7. Filter Fabric may be added to any of the devices which utilize "coarse aggregate" stone to significantly enhance sediment removal. The fabric, which must meet the physical requirements noted for "extra strength" found in Table 3.05-B, should be secured between the stone and the inlet (on wire-mesh if it is present). As a result of the significant increase in filter efficiency provided by the fabric, a larger range of stone sizes (VDOT #1, #2 or #3 Coarse Aggregate) may be utilized with such a configuration. The larger stone will help keep larger sediment masses from clogging the cloth. Notably, significant ponding may occur at the inlet if filter cloth is utilized in this manner.

Construction Specifications

1. Silt Fence Drop Inlet Protection
   a. Silt Fence shall conform to the construction specifications for "extra strength" found in Table 3.05-B and shall be cut from a continuous roll to avoid joints.
   b. For stakes, use 2 x 4-inch wood (preferred) or equivalent metal with a minimum length of 3 feet.

   c. Space stakes evenly around the perimeter of the inlet a maximum of 3-feet apart, and securely drive them into the ground, approximately 18-inches deep (see Plate 3.07-1).
   d. To provide needed stability to the installation, frame with 2 x 4-inch wood strips around the crest of the overflow area at a maximum of 1½ feet above the drop inlet crest.
   e. Place the bottom 12 inches of the fabric in a trench (see Plate 3.07-1) and backfill the trench with 12 inches of compacted soil.
   f. Fasten fabric securely by staples or wire to the stakes and frame. Joints must be overlapped to the next stake.
   g. It may be necessary to build a temporary dike on the downslope side of the structure to prevent bypass flow.
2. Gravel and Wire Mesh Drop Inlet Sediment Filter
   a. Wire mesh shall be laid over the drop inlet so that the wire extends a minimum of 1 foot beyond each side of the inlet structure. Wire mesh with 1/2-inch openings shall be used. If more than one strip of mesh is necessary, the strips shall be overlapped.
   b. Coarse aggregate shall be placed over the wire mesh as indicated on Plate 3.07-2. The depth of stone shall be at least 12 inches over the entire inlet opening. The stone shall extend beyond the inlet opening at least 18 inches on all sides.
   c. If the stone filter becomes clogged with sediment so that it no longer adequately performs its function, the stones must be pulled away from the inlet, cleaned and/or replaced.

   Note: This filtering device has no overflow mechanism; therefore, ponding is likely especially if sediment is not removed regularly. This type of device must never be used where overflow may endanger an exposed fill slope. Consideration should also be given to the possible effects of ponding on traffic movement, nearby structures, working areas, adjacent property, etc.
3. Block and Gravel Drop Inlet Sediment Filter
   a. Place concrete blocks lengthwise on their sides in a single row around the perimeter of the inlet, with the ends of adjacent blocks abutting. The height of the barrier can be varied, depending on design needs, by stacking combinations of 4-inch, 8-inch and 12-inch wide blocks. The barrier of blocks shall be at least 12-inches high and no greater than 24-inches high.

LE&D PROFESSIONALS, P.C.
RIVER RUN EXECUTIVE OFFICES
SUITE-B
110 EXCHANGE STREET
DANVILLE, VA. 24541
N.C. LICENSE: # C-2577
V.A. LICENSE: # 0404-001401
PHONE NO. (434) 792-3680
FAX NO. (434) 792-3685
www.landeng.com

PROPOSED SHEETZ STORE
SHEETZ INC.
DALEVILLE-BOTETOURT COUNTY, VIRGINIA

E & S DETAILS

COMMONWEALTH OF VIRGINIA
RYAN WILLIAM GATEWOOD
Lic. No. 055108
7/18/18
PROFESSIONAL ENGINEER

NO.	DATE	DESCRIPTION	BY
1	7-18-18	COUNTY COMMENTS	W.K.W.

REVISIONS

Sheet No. 15 of 25

Date: MAY 4, 2018

Scale: NTS

Project No.

MPS-SDALI7\eng\dwg\Y-SDALI7-PLAN-1-REV-1