


- 1. EXCAVATE SEWER PIPES AND LOCATE PIPE JOINT. CLEAN OFF PIPE JOINT WITH A POWER WIRE BRUSH. DEWATER EXCAVATION AS REQUIRED.**
- 2. APPLY SIKASET PLUG AROUND THE ENTIRE PIPE JOINT. LET THE SIKASET PLUG SET BEFORE BACKFILLING THE PIPE.**
- 3. IT IS THE CONTRACTOR'S RESPONSIBILITY TO ARRANGE FOR ACCESS AND CLEARING/RESTORATION TO EACH REPAIR LOCATION.**




4905 DICKENS ROAD, SUITE 106
RICHMOND, VIRGINIA 23230
(804)965-9000 www.URScorp.com



**WESTERN VIRGINIA
WATER AUTHORITY**

**HOLLINS ROAD EASEMENT AND MASON MILL ROAD
SEWER REHABILITATION**

POINT REPAIRS TINKER CREEK INTERCEPTOR

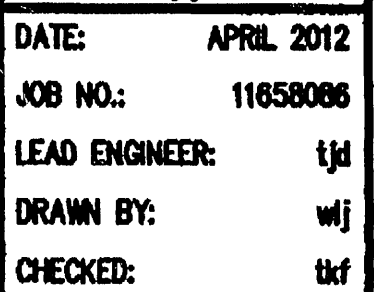

C-5

```
FILE NAME: $(getvar, "filepath", "empinfo") LAYOUT NAME: $(getvar, "tab") PLOTTED:$(etime, 0, 0000) MONTH DO: "YYYY - HMMmm/pon"
```