


Drawing name: U:\00CVS\113001048-Roanoke-Towers-Landscape Plans and Specs\plans\LA-2_LANDSCAPE DETAILS.dwg LA-2 Aug 11, 2005 12:53pm by: Terry.Boylan

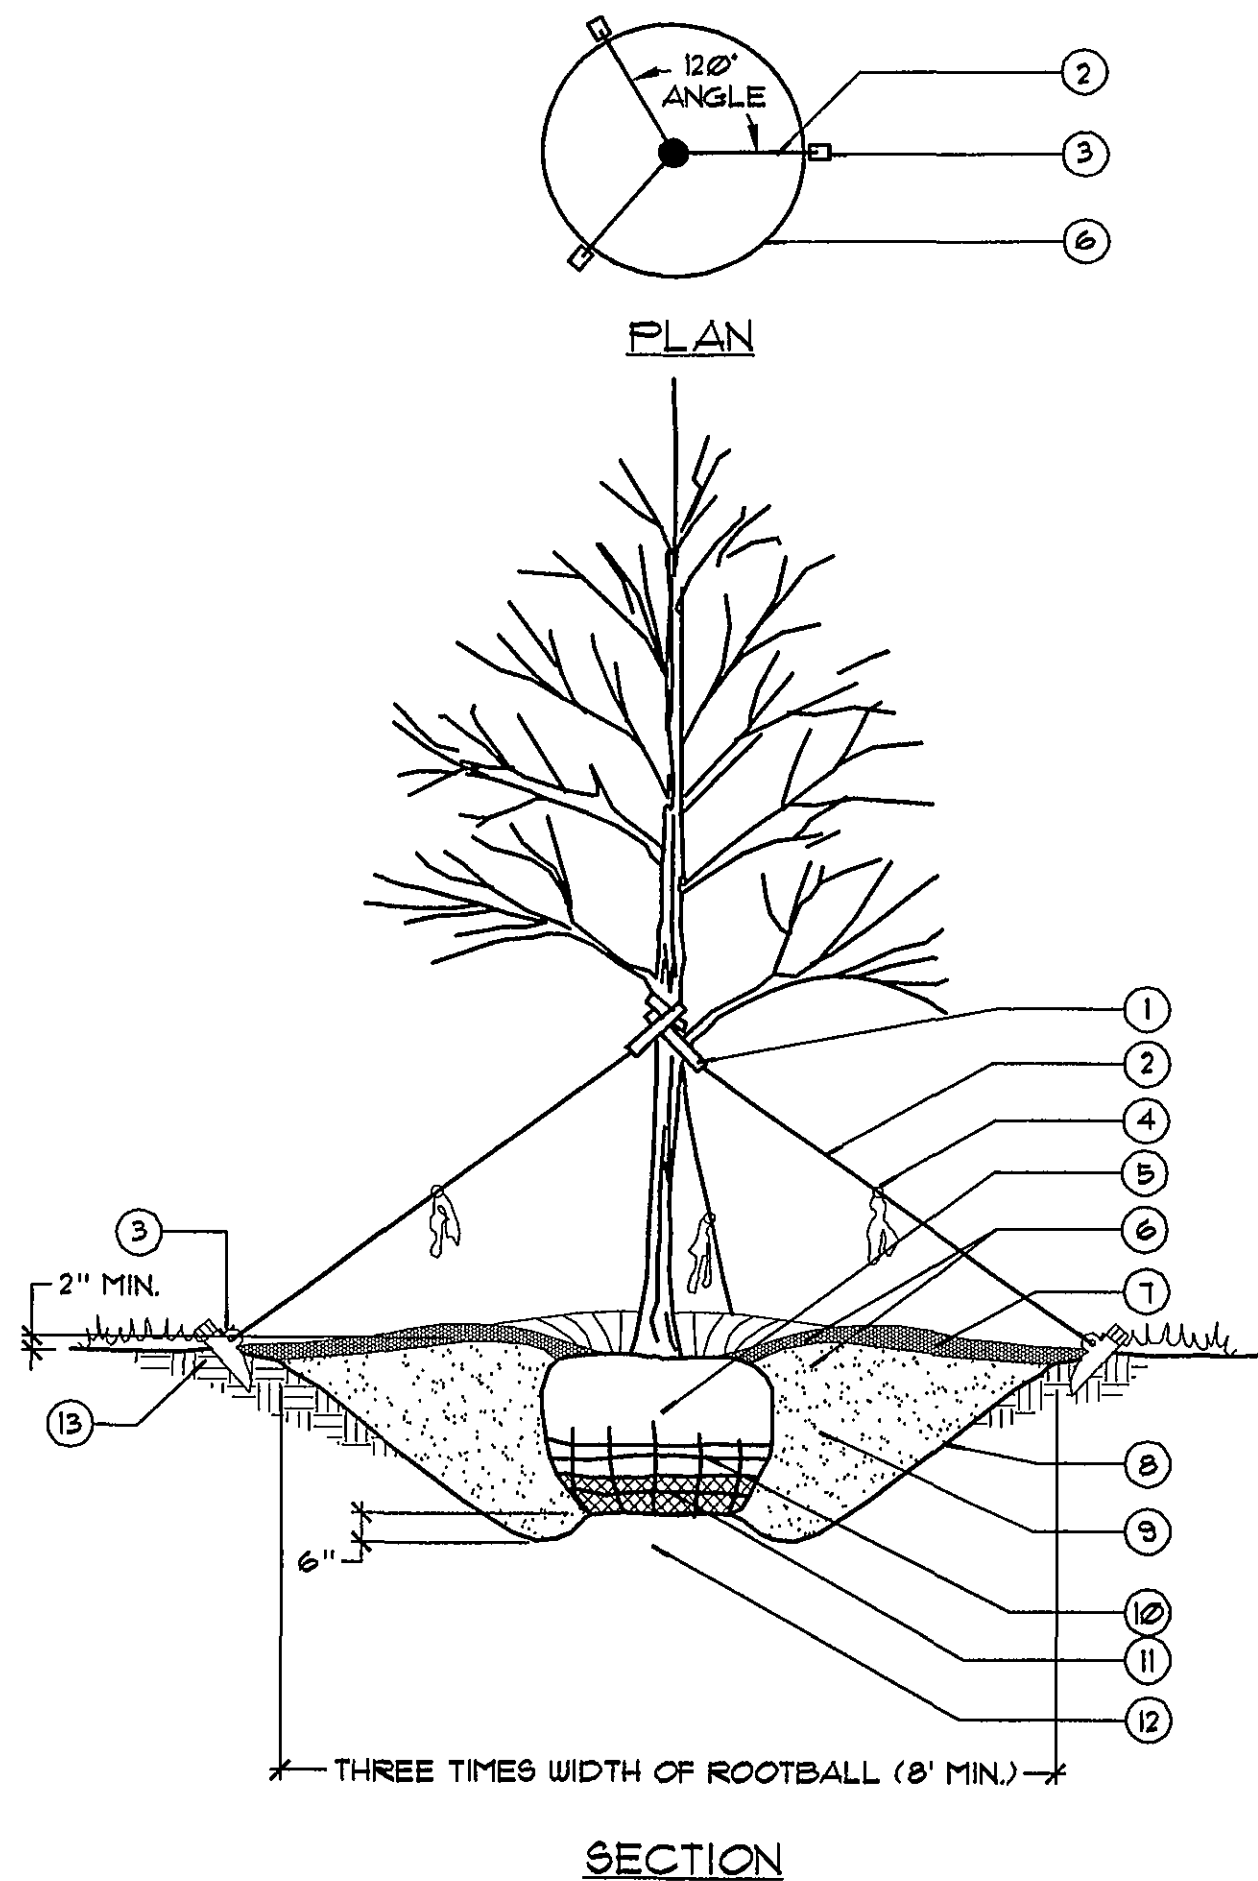


1 TYPICAL TREE PLANTING / GUYING DETAIL
(FOR 12'-20' TREE HEIGHTS AT PLANTING)

NOT TO SCALE

- 1 TREE STRAP
- 2 TREE GUY WIRE - ADD TURNBUCKLES IF NECESSARY TO STABILIZE TREE
- 3 TREE GUYING STAKE
- 4 WARNING FLAG
- 5 ROOTBALL:
 - IN SANDY / WELL DRAINED SOIL CONDITIONS: SET TOP SURFACE ELEVATION OF ROOTBALL FLUSH WITH FINAL EXISTING GRADE
 - IN HEAVY CLAY / POORLY DRAINED SOIL CONDITIONS: SET TOP SURFACE OF ROOTBALL 1/4-1/3 ABOVE FINAL EXISTING GRADE.
- 6 EARTHEN SAUCER
- 7 3" MULCH LAYER
- 8 EXCAVATE PLANTING PIT TO 3 TIMES THE WIDTH OF ROOTBALL (8' MIN.) FLARING SIDES OF PIT AS SHOWN. SCARIFY SIDES OF PIT SO THAT THE SIDES ARE NOT SMOOTH OR GLAZED.
- 9 BACKFILL WITH TOPSOIL PER SPECIFICATIONS
- 10 REMOVE TOP 1/2 OF WIRE ROOT BALL BASKET OR ROOTBALL STRAPS. REMOVE ALL SYNTHETIC STRAP MATERIAL FROM ENTIRE ROOT BALL.
- 11 REMOVE TOP 3/4 OF BURLAP ROOT BALL COVERING. REMOVE ALL SYNTHETIC COVERING FROM ENTIRE ROOTBALL.
- 12 PLACE ROOTBALL ON SOLID SUBGRADE - NOT LOOSE BACKFILL MATERIAL
- 13 UNDISTURBED SUBGRADE

NOTES:

1. REFERENCE SPECIFICATIONS FOR ALL SOIL PROCEDURES.

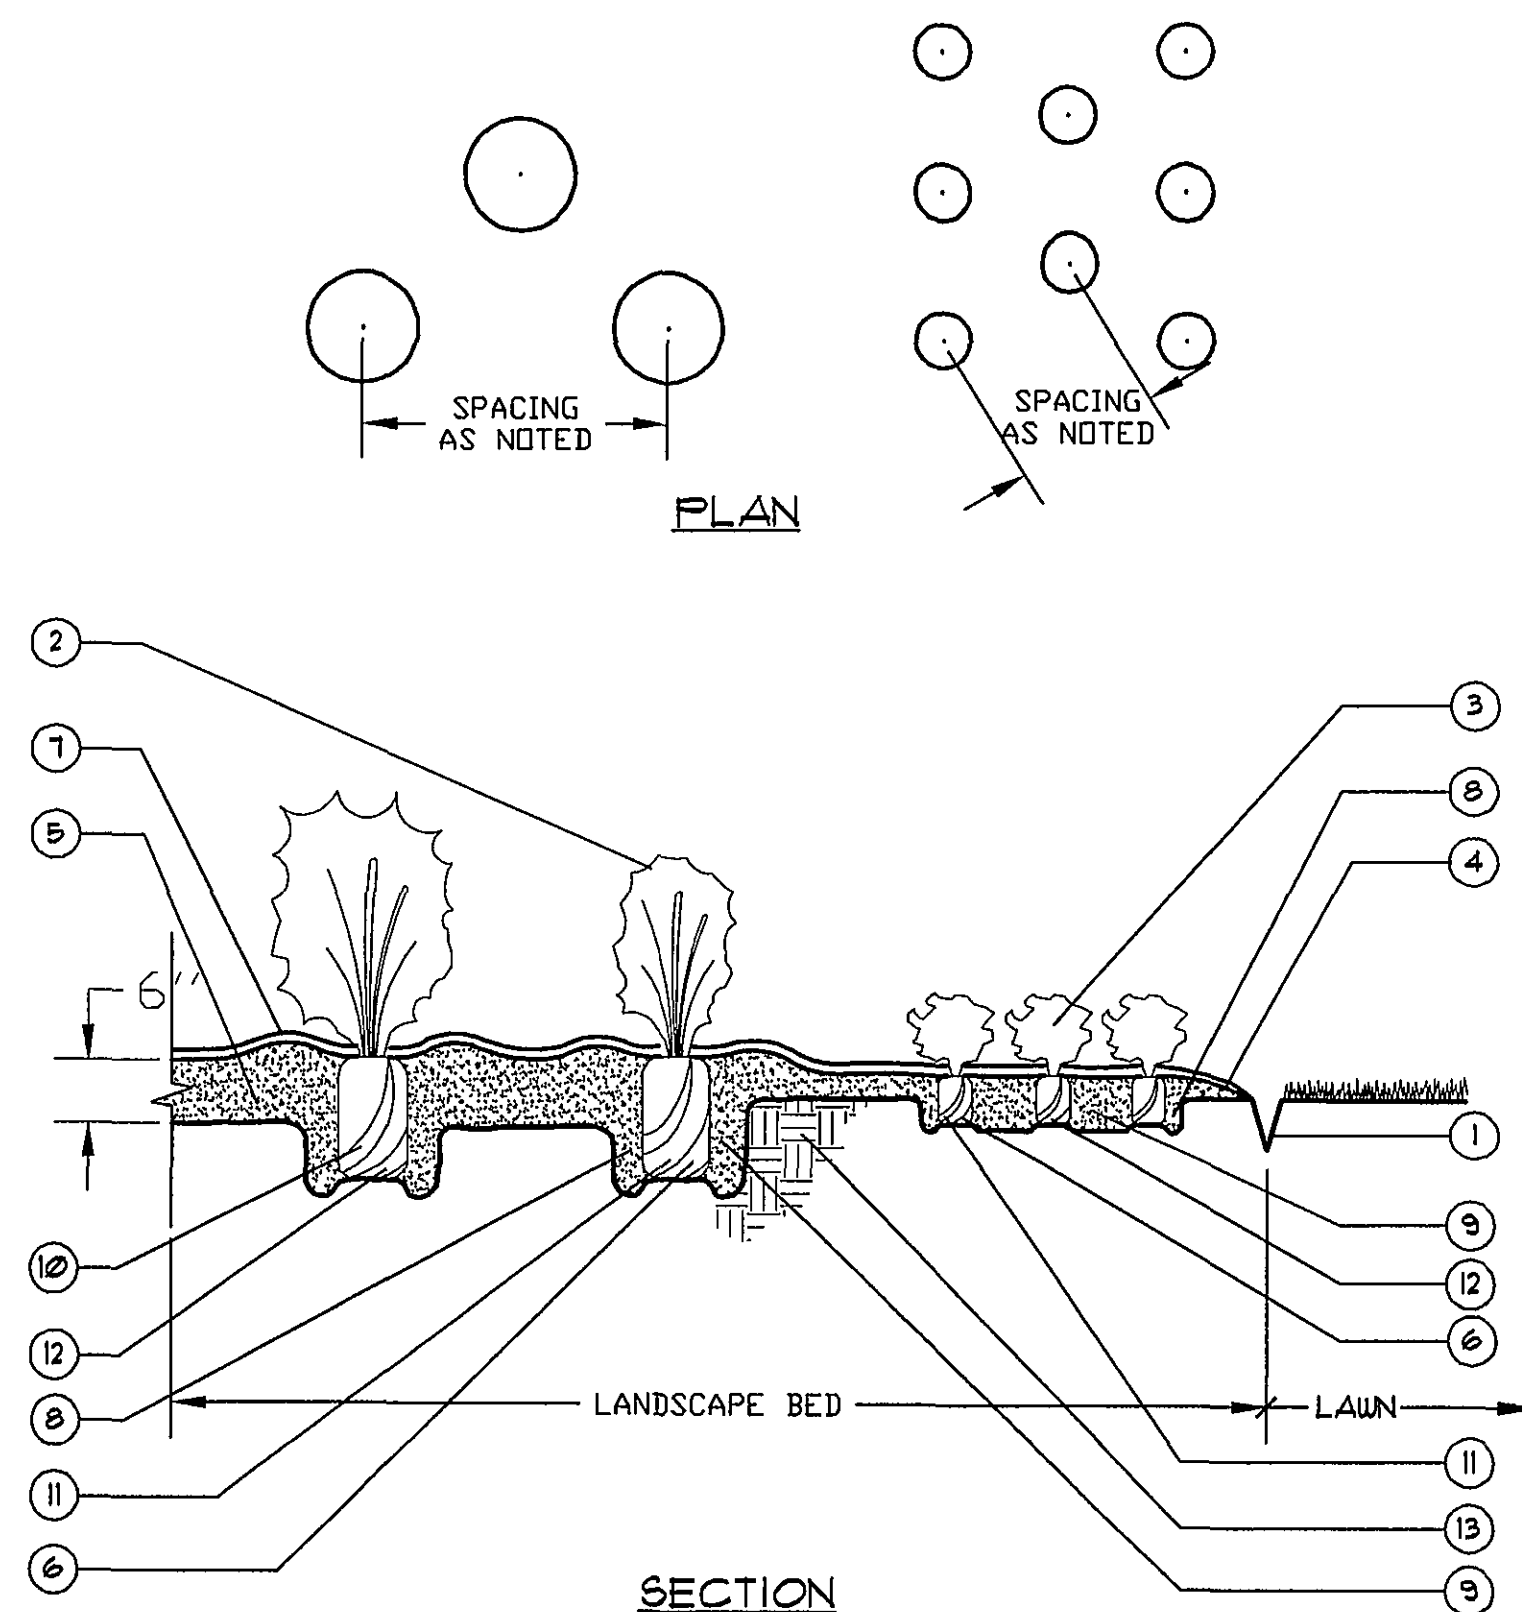


2 TYPICAL LANDSCAPE BED PLANTING DETAIL
(SHRUBS & GROUNDCOVER)

NOT TO SCALE

- 1 SHOVEL EDGE - CONTRACTOR TO PROVIDE SMOOTH CONTINUOUS EDGE AS SHOWN ON PLANS. DIG EDGE WITH COMMON SPADE OR STRAIGHT BLADE SHOVEL.
- 2 SHRUB PLANTING
- 3 GROUNDCOVER PLANTING
- 4 2" MULCH
- 5 6" DEPTH TILLED/AMENDED SOIL
- 6 ROOT BALL:
 - IN SANDY/WELL DRAINED SOIL: SET TOP SURFACE ELEVATION OF ROOTBALL FLUSH WITH FINAL EXISTING GRADE.
 - IN HEAVY CLAY/POORLY DRAINED SOIL: SET TOP SURFACE OF ROOTBALL 1/4-1/3 ABOVE FINAL EXISTING GRADE.
- 7 EARTHEN SAUCER
- 8 EXCAVATE PIT TO 2 TIMES THE WIDTH OF ROOTBALL. SCARIFY SIDES OF PIT SO THAT SIDES ARE NOT SMOOTH/GLAZED.
- 9 BACKFILL WITH TOPSOIL PER SPECIFICATIONS
- 10 LARGER B&B MATERIAL:
 - REMOVE TOP 1/2 OF WIRE ROOT BALL BASKET OR ROOTBALL STRAPS. REMOVE ALL SYNTHETIC STRAP MATERIAL FROM ENTIRE ROOT BALL.
 - REMOVE TOP 3/4 OF BURLAP ROOT BALL COVERING. REMOVE ALL SYNTHETIC COVERING.
- 11 CONTAINER GROWN MATERIAL: REMOVE ENTIRE CONTAINER FROM AROUND PLANT PRIOR TO PLANTING.
- 12 PLACE ROOTBALL ON SOLID SUBGRADE, NOT LOOSE BACKFILL MATERIAL
- 13 UNDISTURBED SUBGRADE

NOTES:

1. REFERENCE SPECIFICATIONS FOR ALL SOIL PROCEDURES.

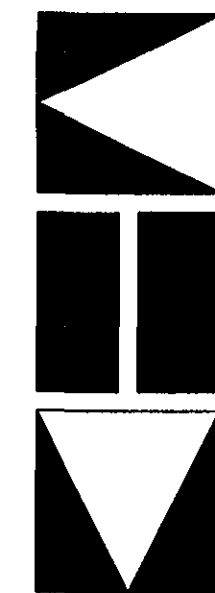


Kimley-Horn
and Associates, Inc.
1500 FOREST AVENUE, SUITE 115
RICHMOND, VIRGINIA 23229

CONSULTANT:

KIMLEY-HORN AND ASSOC.
1500 FOREST AVENUE
TEL (804) 673-3882
FAX (804) 673-3980

SEAL:

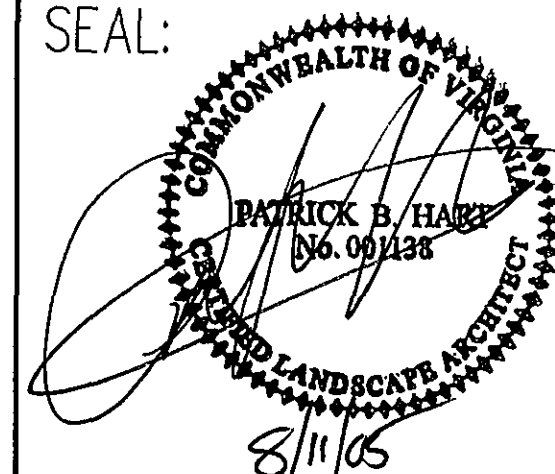

CVS/
pharmacy

13,013 S.F. PROTOTYPE
STORE NUMBER: #3949

INTERSECTION OF
BARNDON AVE. & COLONIAL AVE.
ROANOKE, VIRGINIA

OWNER/DEVELOPER:

THE REBKEE COMPANY
1020 OLD BON AIR ROAD
RICHMOND, VA 23235
PHONE: (804) 560-0500
FAX: (804) 560-0778

REVISIONS:

LAYOUT COORD: BDM

PLANNING MGR. KDC

DRAWING BY:

DATE: 04/06/05

JOB NUMBER: 113001048

TITLE:

PLANTING
DETAILS

SHEET NUMBER:

LA-2

COMMENTS:

NOT FOR CONSTRUCTION

ROANOKE, VA
CVS STORE 3949