
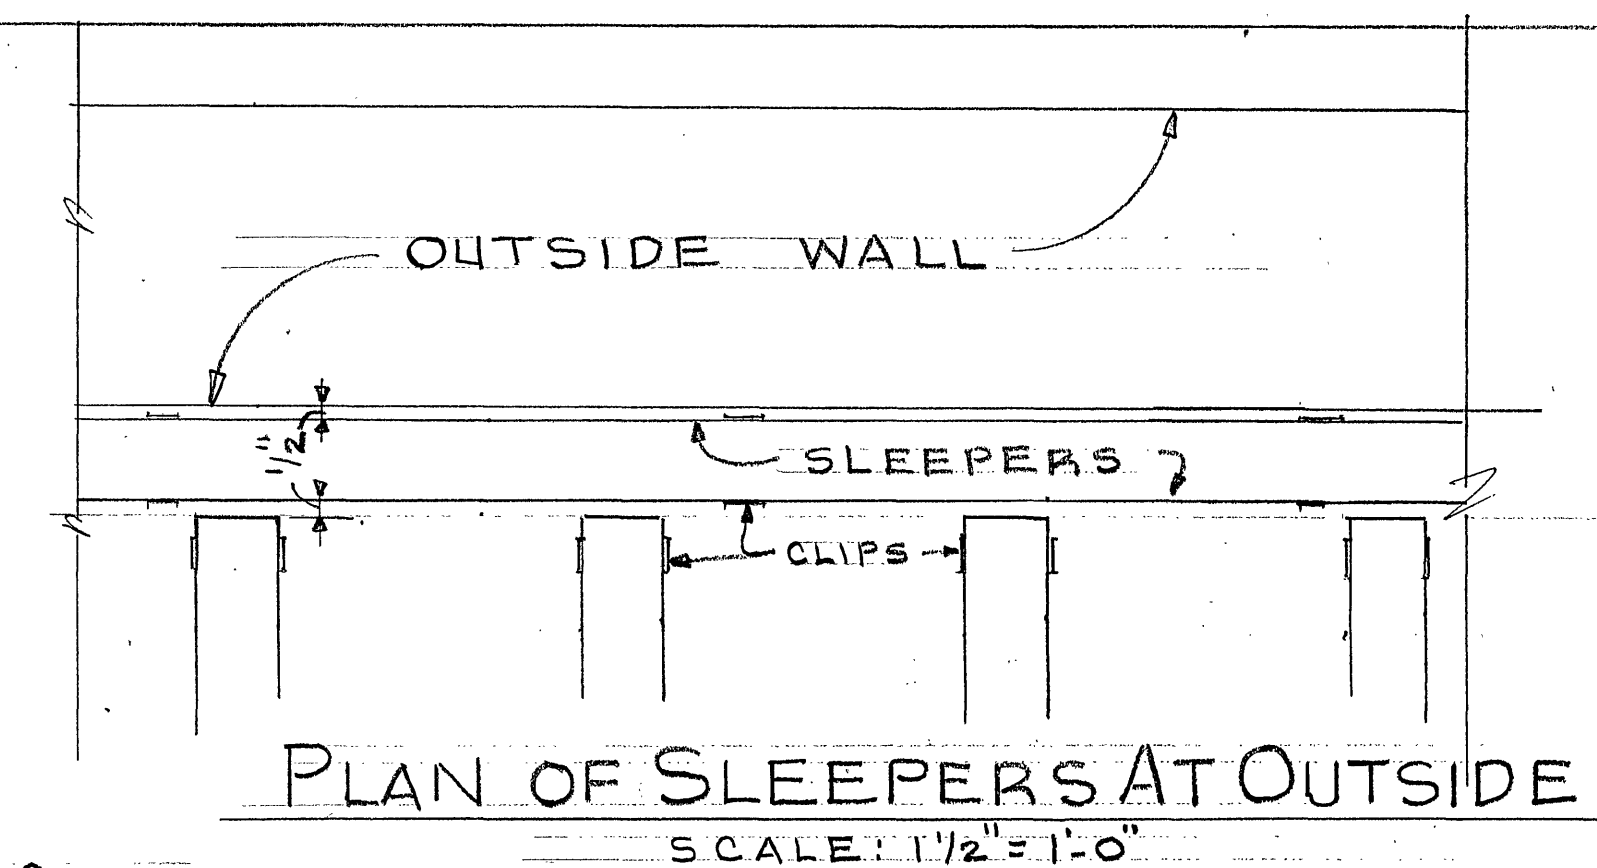
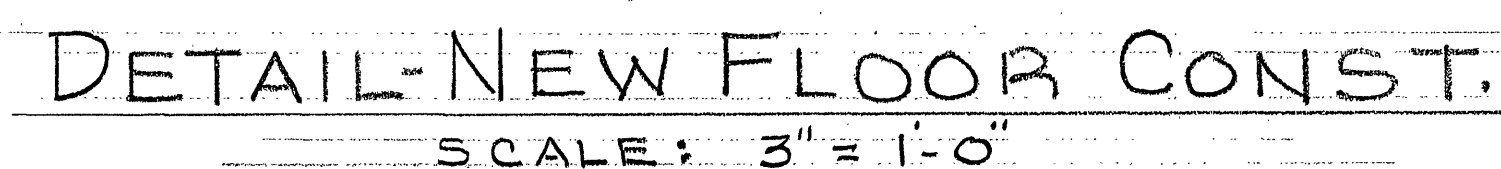


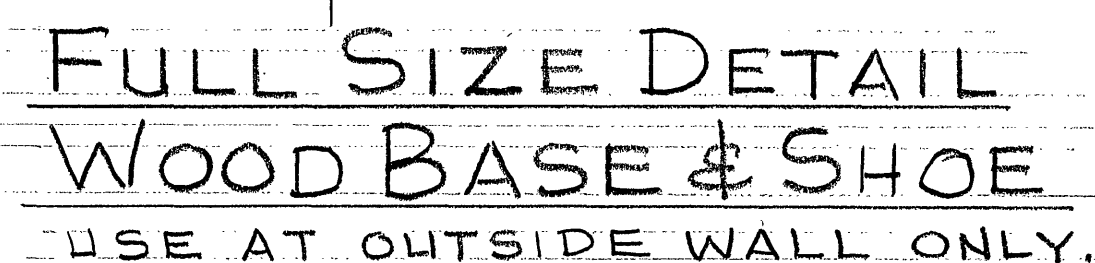

SCALE: $1/4" = 1'-0"$

NOTE: THIS BUILDING IS ON THE NATIONAL HISTORICAL
REGISTRY AND ANY WORK DONE ON THIS BUILDING
MUST BE DONE WITH THIS IN MIND.

- GENERAL NOTES:

1. THE FINISHED OAK FLOOR, THE PINE SUB-FLOOR, THE WOOD FLOOR JOISTS AND THE WOOD BASE AND SHOE HAVE BEEN INFESTED WITH TERMITES AND NEEDS TO BE REPLACED.
2. REMOVE ALL OF THE WOOD AS LISTED ABOVE PLUS ANY OTHER WOOD FOUND BELOW THE FLOOR & FRAMING WHEN IT HAS BEEN REMOVED. DO NOT LEAVE ANY WOOD BELOW EXISTING FINISHED FLOOR LEVEL.
3. PROVIDE & BUILD BLOCK WALLS FOR PIT & MANHOLE (M.H.) IN FRONT OF PUMP ENGINES & MACHINE PIT OF 6" BLOCK.
4. PROVIDE & INSTALL CLEAN GRAVEL FILL AS REQUIRED, 4" MINIMUM CONCRETE SLAB WITH 6x6-WI. 4x1/4 MESH AT CENTER OF SLAB. POUR SLAB ON GIL POLYETHYLENE VAPOR BARRIER LAPPED 4 INCHES.
5. WOOD SLEEPERS TO BE 2x4s AT 16" O.C. SLEEPERS TO BE TREATED WITH WOLMAN SALTS. MOUNT SLEEPERS WITH FLOOR CLIPS @ 2'-0" O.C. CLIPS EQUAL TO HECKMANN #300 U-TYPE FLOOR CLIPS - 20 GAGE, 1/4" WIDE, GALVANIZED, 1/2" IN FLOOR.
6. SUB FLOOR SHALL BE 1x6 PINE FLOOR, WOLMAN SALTS, LAID DIAGONALLY.
7. FINISHED FLOOR SHALL BE 2 3/4" WHITE OAK NO. 1 COMMON, 2 1/4" FINISHED FACE TO MATCH EXISTING. SAND FLOOR, DRUM SANDER ON BODY & DISC SANDER AROUND EDGES, TO SMOOTH EVEN TEXTURE WITH PROGRESSIVE FINER SAND PAPER. REMOVE ALL DUST.
8. AFTER SANDING, APPLY PASTE WOOD FILLER PLUS TWO COATS POLYURETHANE VARNISH.
9. FLOOR BETWEEN PUMPS IS SUPPORTED BY 2x4 CONTINUOUS FASTENED TO CONCRETE PUMP BASE, 2x4 JOISTS @ 16" O.C., SUB-FLOOR & FINISHED FLOOR. REBUILD IN LIKE MANNER.
10. REMOVE WROUGHT IRON PICKET FENCE CAREFULLY & STORE. REINSTALL IN SAME LOCATION WHEN FLOOR IS COMPLETE. PAINT WITH ONE COAT BLACK GLOSS INTERIOR ENAMEL.

DATE	REV.	DESCRIPTION	BY
		REMOVAL & RESTORATION OAK FLOOR & WOOD BASE CRYSTAL SPRINGS PUMP HOUSE- ROANOKE VIRGINIA	L. B. 8-23-88 19-851

Banked -

Banquet +

R. C. Hulse

stain - dark black-brown