



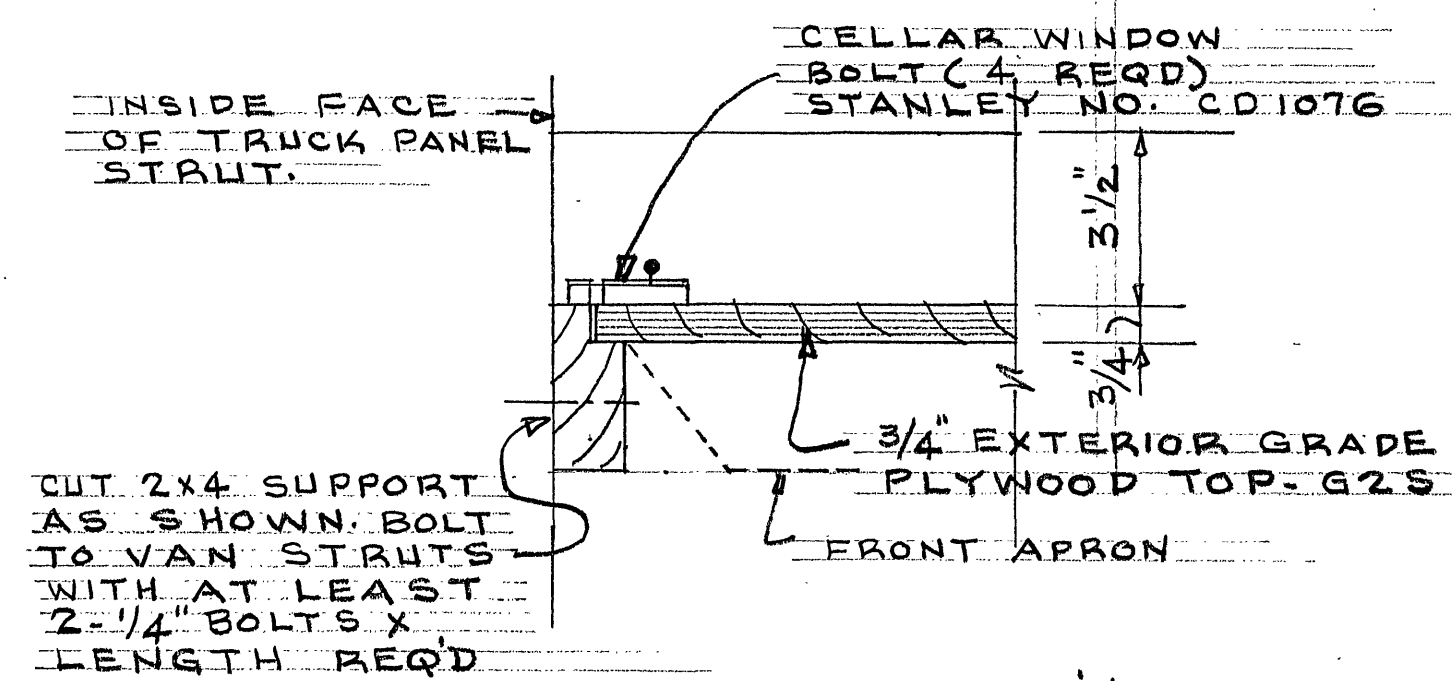


SECTION A
SCALE: 3" = 1'-0"

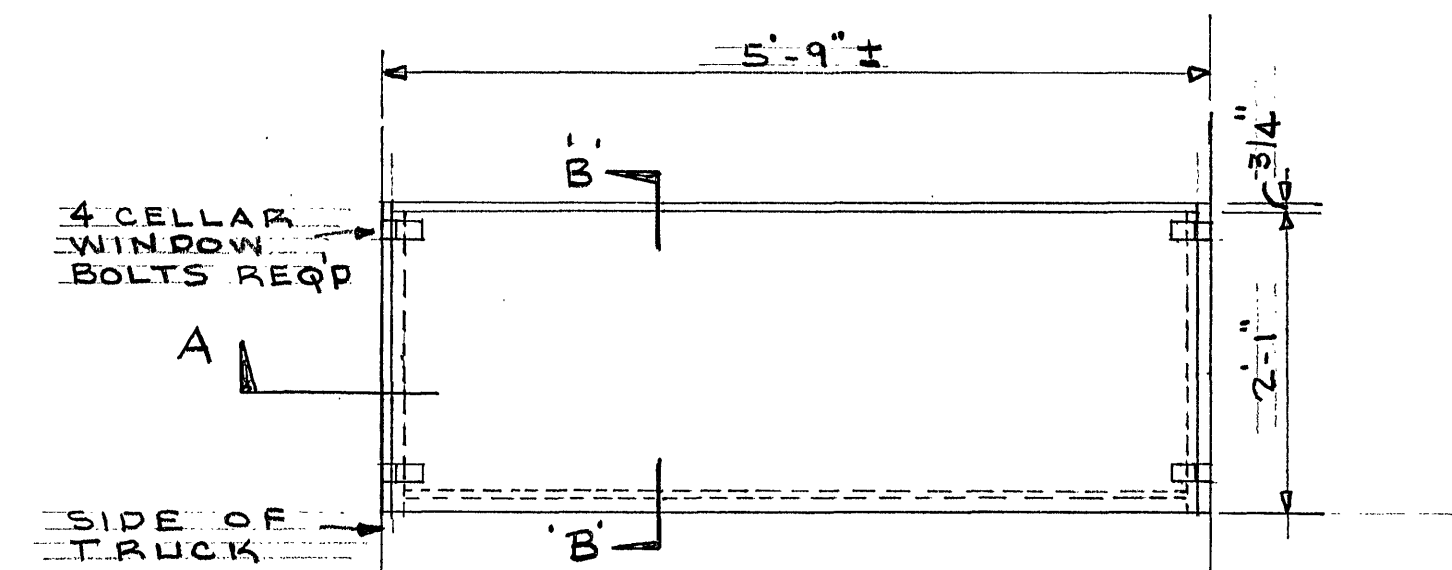


PLAN OF WORK BENCH
SCALE: 3/4" = 1'-0"

PAINT 3 COATS AS NOTED BELOW.

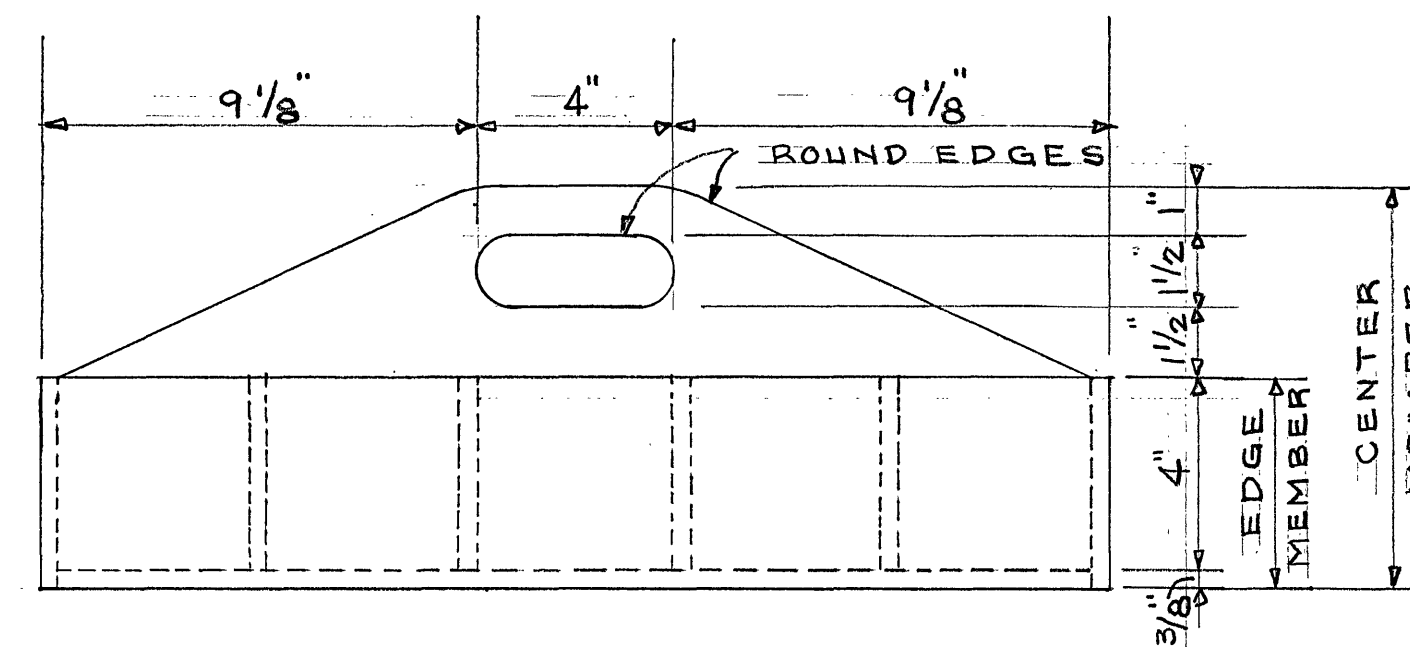


ELEVATION
SCALE: 3" = 1'-0"

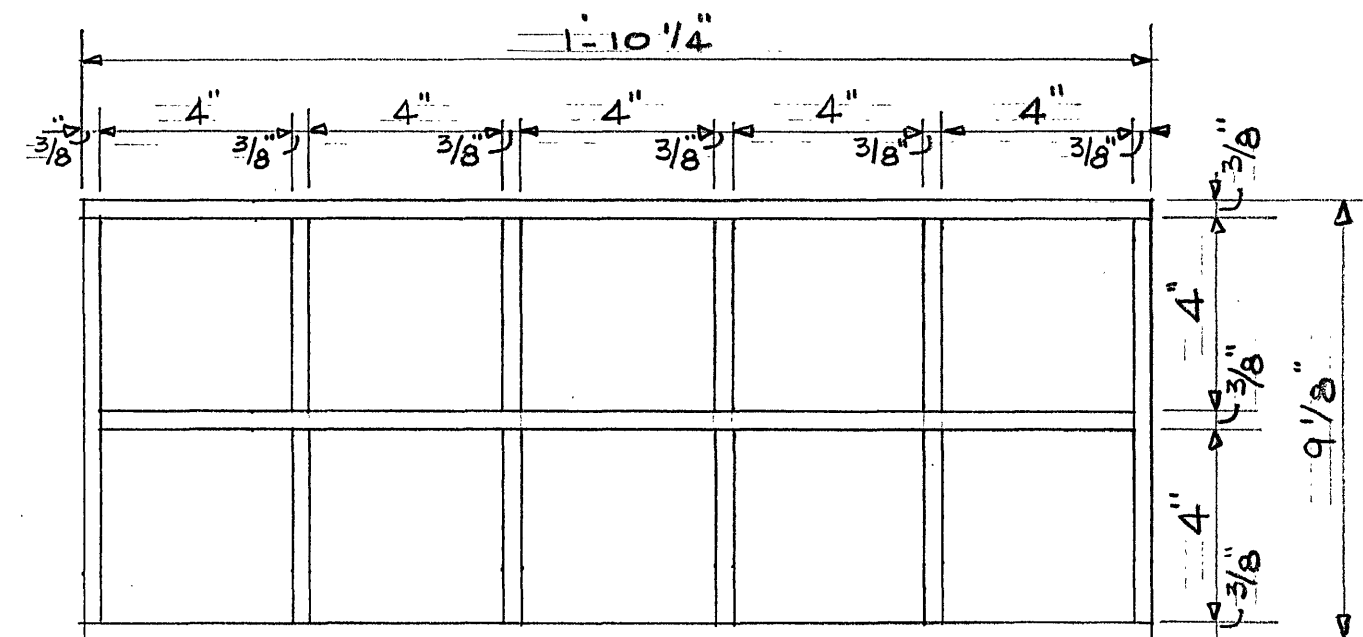


PLAN- REAGENT CARRYING TRAY A
SCALE: 3" = 1'-0"

FABRICATE TRAYS FROM 3/8" EXTERIOR PLYWOOD-G2S.
PAINT 1 COAT PRIMER & 2 COATS EXTERIOR ENAMEL.
FASTEN WITH NAILS & WATERPROOF GLUE
TEN (10) THIS REQUIRED.

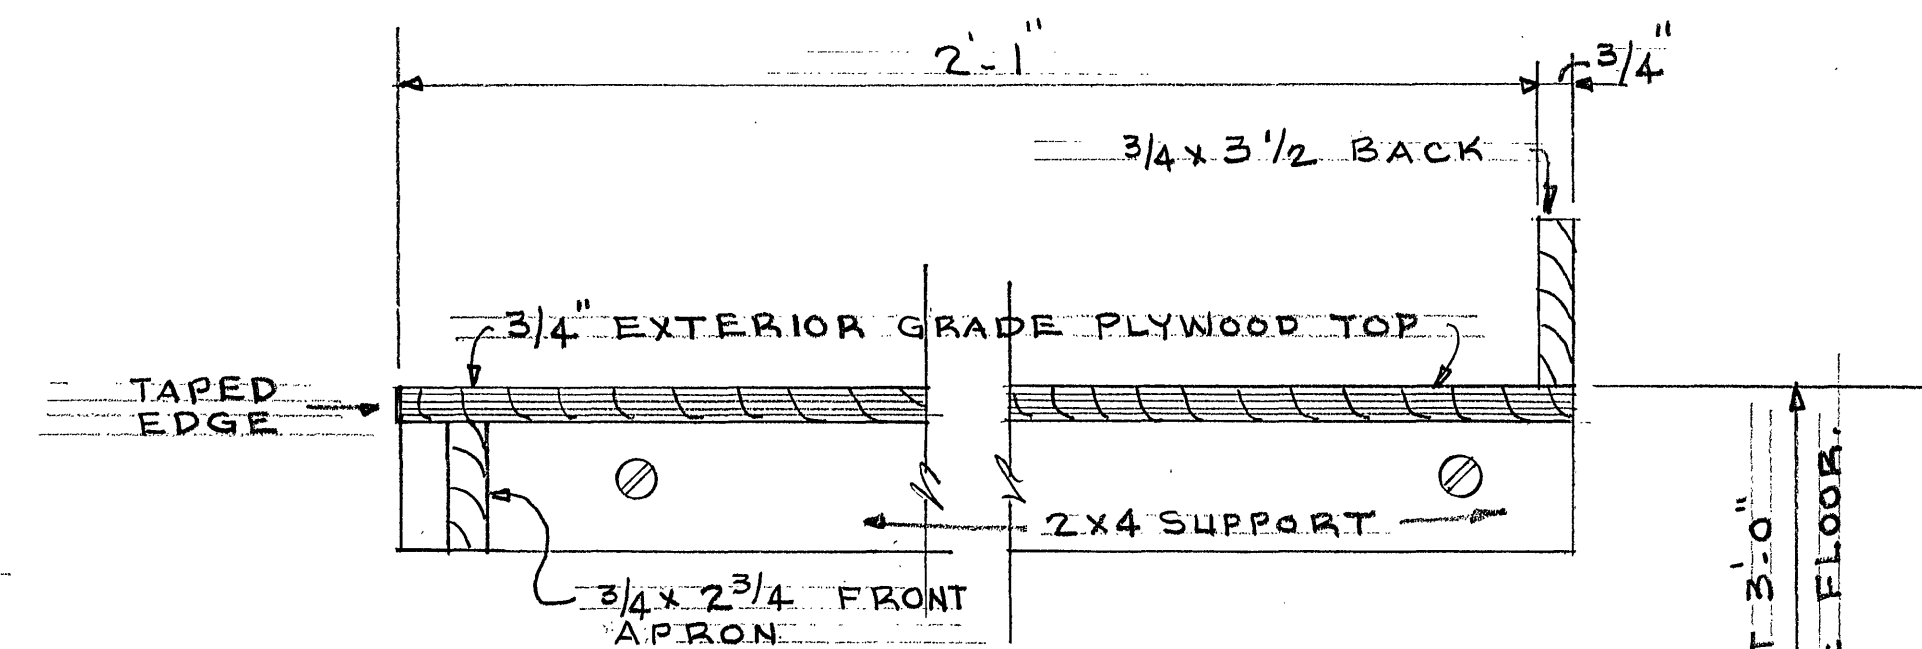


SECTION B-B
SCALE: 3" = 1'-0"


BOLT AT LEAST 3-2x4S
TO PANEL VAN STRUTS.
LOCATE SO CABINET WILL
BE SECURELY ANCHORED
AND PLUMB.

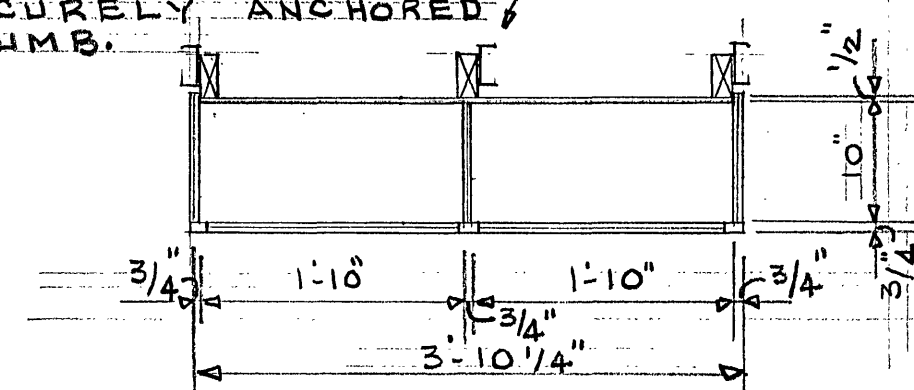

PLAN OF CABINET
SCALE: 3/4" = 1'-0"

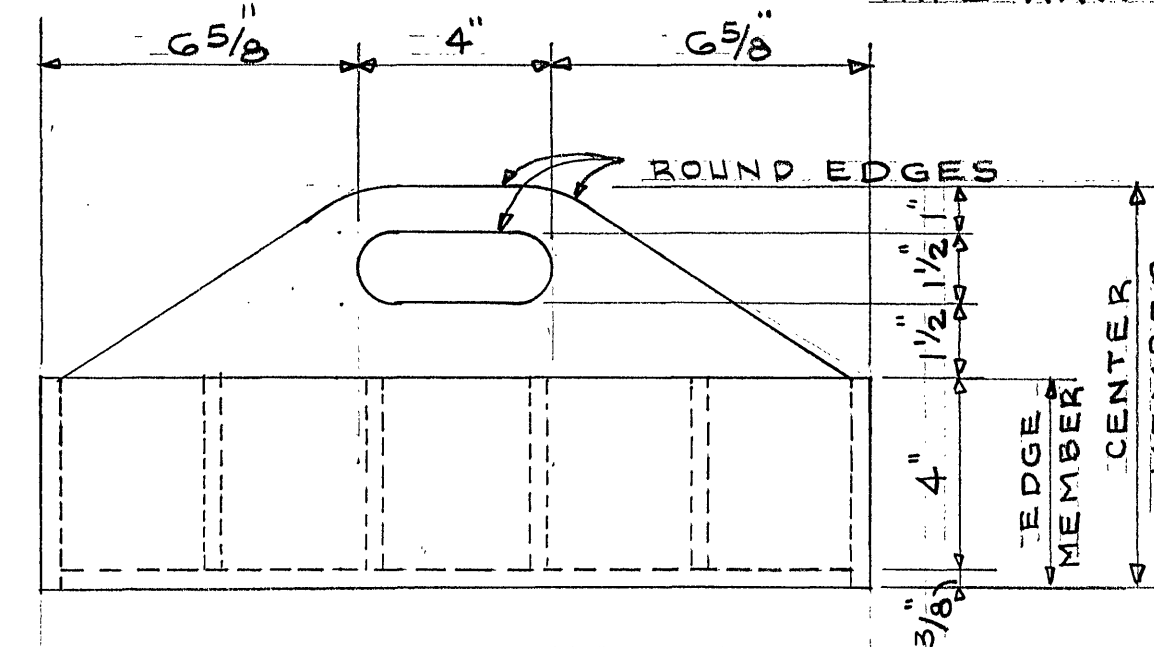


ELEVATION
SCALE: 3" = 1'-0"

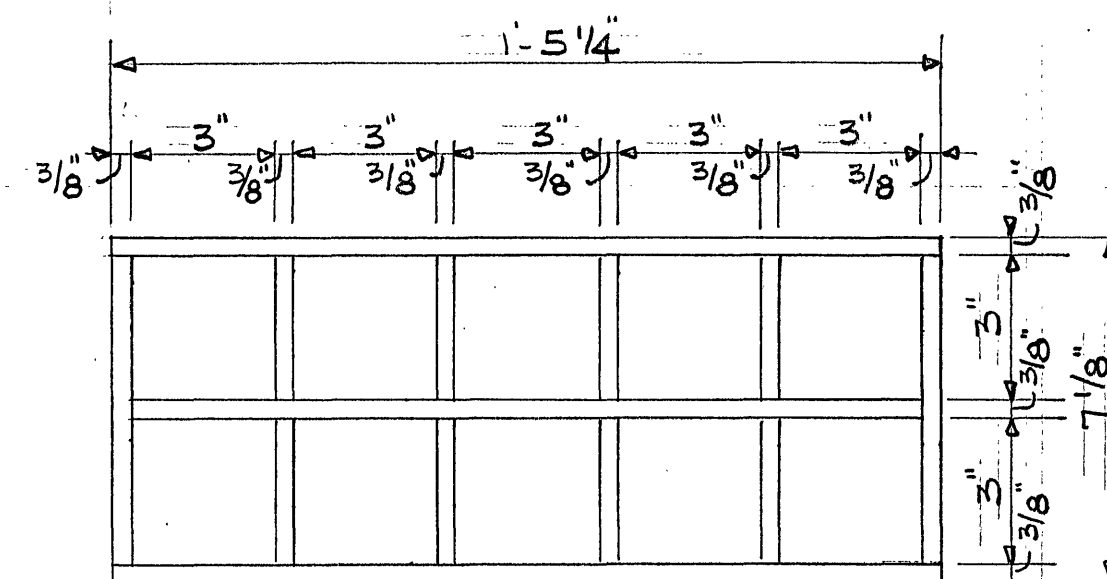


PLAN- REAGENT CARRYING TRAY B
SCALE: 3" = 1'-0"

FABRICATE & PAINT SAME AS NOTED FOR TRAY A
AT LEFT
TEN (10) THIS REQUIRED.

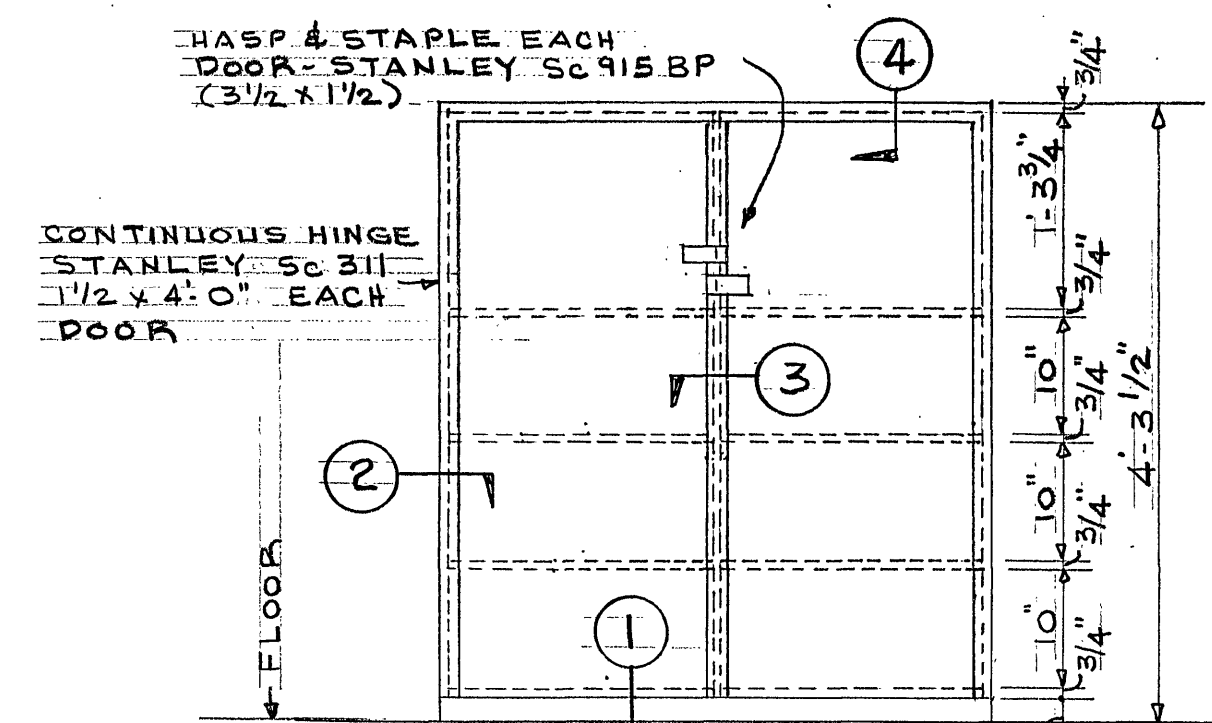


CABINET ELEVATION
SCALE: 3/4" = 1'-0"


FABRICATE CABINET FROM EXTERIOR
GRADE PLYWOOD (G2S) & SOLID STOCK
AS DETAILED.
PAINT 1 COAT PRIMER & 2 COATS EXTERIOR
ENAMEL.
FASTEN WITH NAILS & WATERPROOF GLUE
TAPE RAW EDGES OF PLYWOOD.

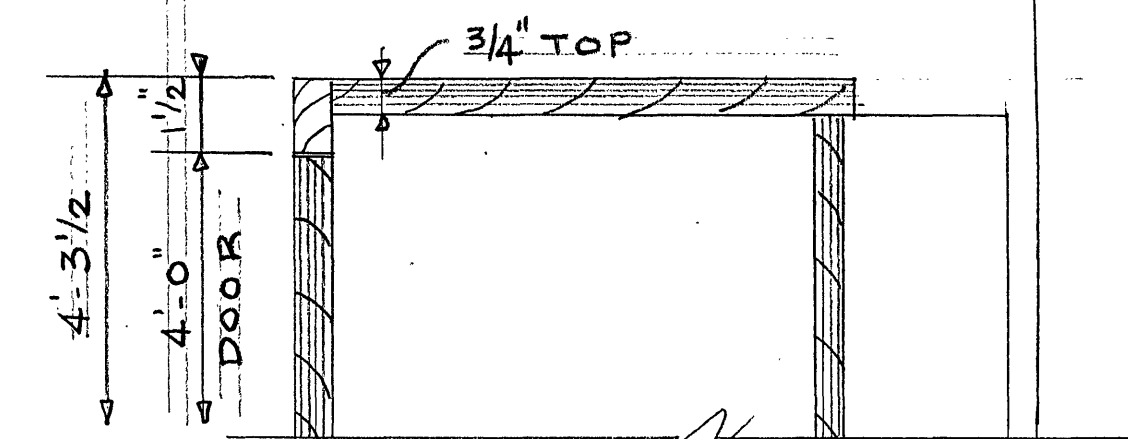


DETAIL @ 4

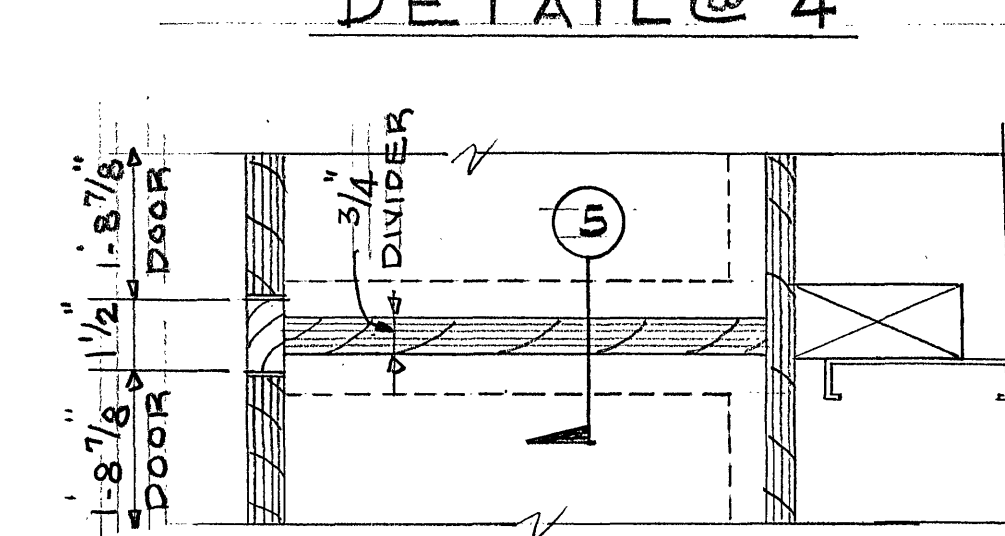

DETAIL @ 3

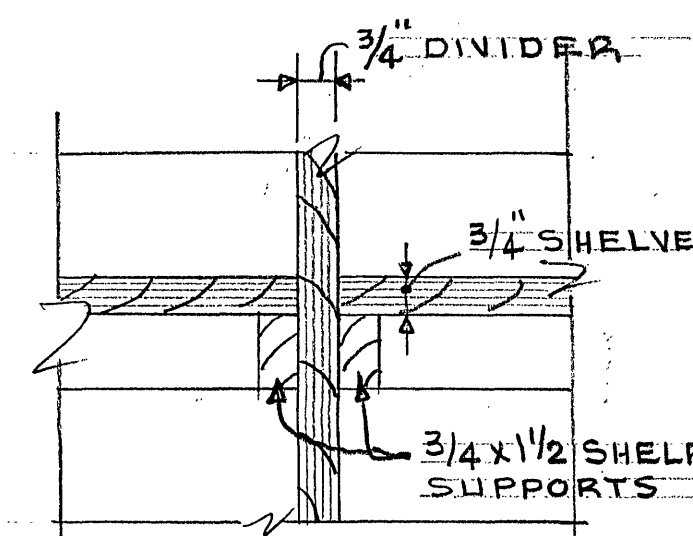


DETAIL @ 5

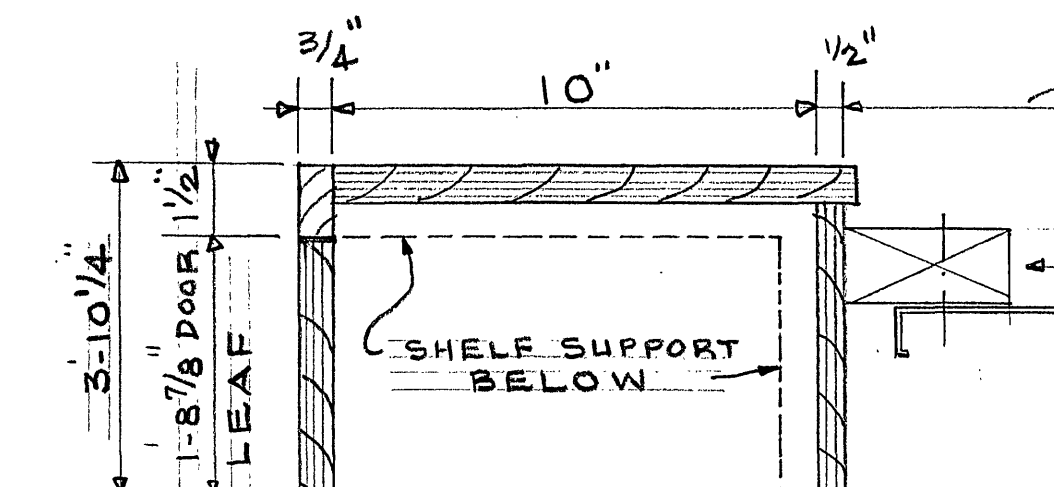

DETAIL @ 2


VARIES AS REQD
BY SIDE OF VAN
CONSTRUCTION

USE AT LEAST 3-2x4S
BOLTED TO VAN. CUT
2x4S AS REQUIRED
TO INSTALL AND ANCHOR
CABINET PLUMB.
(3-2x4S COULD BE RUN
HORIZ. IF DESIRED)

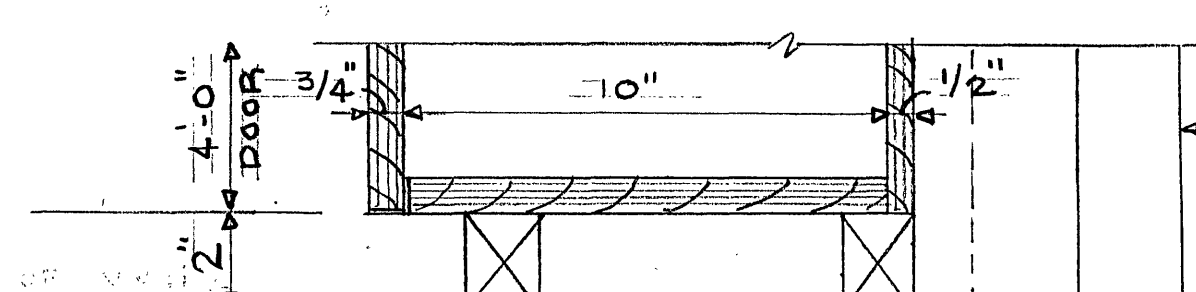

DETAIL @ 1

CABINET DETAILS
SCALE: 3" = 1'-0"

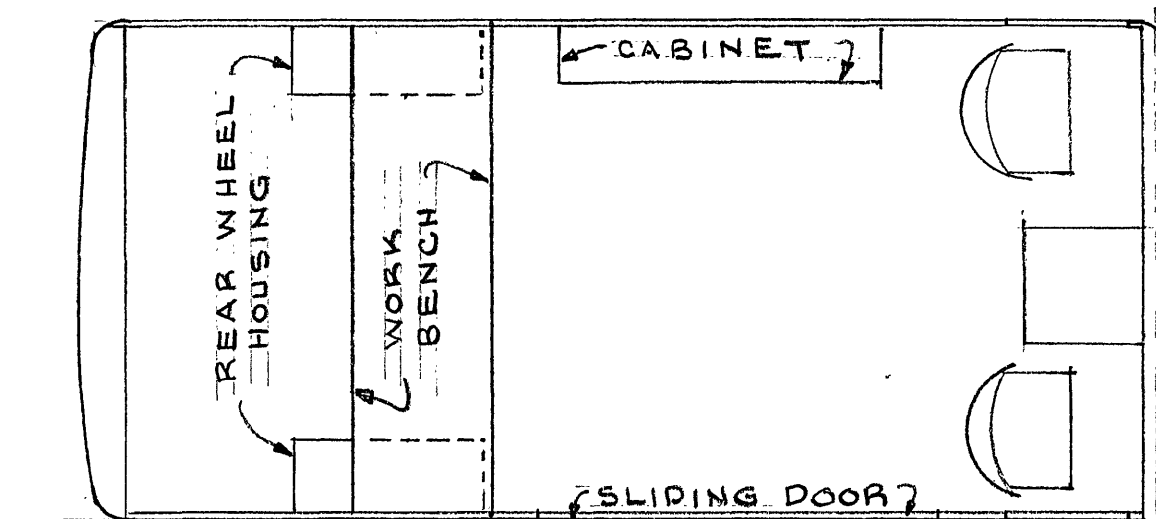

PLAN OF VAN
NOT TO SCALE

NOTE:
VAN WILL BE DELIVERED TO SHOP OF FABRICATOR
FOR INSTALLATION OF CABINET & WORK BENCH.

DATE	REV.	DESCRIPTION	BY
10-15-15		FABRICATE & INSTALL MILLWORK IN VAN #521 SEWERAGE T'MT PLANT ROANOKE, VA.	Thomas J. Broady
		CITY OF ROANOKE OFFICE OF CITY ENGINEER ROANOKE, VIRGINIA	CITY ENGINEER
		CONTRACTOR MUST VERIFY ALL DIMENSIONS AT PROJECT BEFORE PROCEEDING WITH WORK	